

# SelRO<sup>®</sup> MPS-34 - pH Stable Membrane

Nanofiltration Spiral Module Series - 2540, 4040

PRODUCT DESCRIPTION				
Membrane Chemistry: Proprietary composite nanofiltration membrane				
Membrane Type:	pH stable nanofiltration membrane			
Molecular Weight Cut-Off (MWCO):	200 Dalton			
Construction:	Spiral wound element			
Major Applications:	Acid and caustic recovery, product concentration			
Permeate Tube Material:	CPVC			


SPECIFICATIONS						
Model	Rejectior Glucose / Sucrose	n [%] NaCl	Permeate Flow gpd (m³/day)	Feed Spacer mil (mm)	Membrane Area ft <sup>2</sup> (m <sup>2</sup> )	
MPS-34 2540 A2X	95 / 97	35	610 (2.3)	30 (0.8)	17.2 (1.6)	
MPS-34 2540 A2Z	95 / 97	35	455 (1.7)	57 (1.4)	12.9 (1.2)	
MPS-34 4040 A2X	95 / 97	35	2,240 (8.5)	30 (0.8)	60.3 (5.6)	
MPS-34 4040 A2Z	95 / 97	35	1,520 (5.8)	57 (1.4)	43.0 (4.0)	
	MPS-34 2540 A2X MPS-34 2540 A2Z MPS-34 4040 A2X	Model      Glucose / Sucrose        MPS-34 2540 A2X      95 / 97        MPS-34 2540 A2Z      95 / 97        MPS-34 4040 A2X      95 / 97	Model      Rejection Glucose / Sucrose      NaCl NaCl        MPS-34 2540 A2X      95 / 97      35        MPS-34 2540 A2Z      95 / 97      35        MPS-34 4040 A2X      95 / 97      35	Model      Rejection [%] Glucose / Sucrose      NaCl NaCl Sucrose      Permeate Flow gpd (m³/day)        MPS-34 2540 A2X      95 / 97      35      610 (2.3)        MPS-34 2540 A2Z      95 / 97      35      455 (1.7)        MPS-34 4040 A2X      95 / 97      35      2,240 (8.5)	Model      Rejection [%] Glucose / Sucrose      Permeate Flow gpd (m³/day)      Feed Spacer mil (mm)        MPS-34 2540 A2X      95 / 97      35      610 (2.3)      30 (0.8)        MPS-34 2540 A2Z      95 / 97      35      455 (1.7)      57 (1.4)        MPS-34 4040 A2X      95 / 97      35      2,240 (8.5)      30 (0.8)	

\*Test Conditions: RO water at 440 psi (30 bar), 86°F (30°C). Feed solution for rejection tests is 3% glucose / 3% sucrose or 5% NaCl.

OPERATING AND DESIGN INFORMATION*				
Typical Operating Pressure:	220-510 psi (15-35 bar)			
Maximum Temperature:	122°F (50°C)			
Allowable pH - Continuous Operation:	0-14			
Allowable pH - Clean-In-Place (CIP):	0-14			
Maximum Pressure Drop Per Element:	10 psi (0.7 bar)			
Maximum Pressure Drop Per Vessel (5 in Series):	50 psi (3.5 bar)			
*Consult KSS Process Technology Group for specific applications				

\*Consult KSS Process Technology Group for specific applications.

## NOMINAL DIMENSIONS

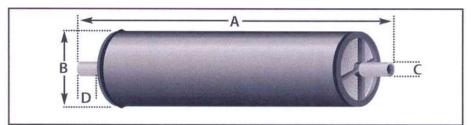

	ļ	١	E	3		)		)
Model	inches	mm	inches	mm	inches	mm	inches	mm
MPS-34 2540	40.0	1016	2.4	61	0.75	19.0	1.0	25.4
MPS-34 4040	40.0	1016	3.9	99	0.75	19.0	1.0	25.4

TYPICAL PROCESS STREAMS					
5% Hydrochloric acid	15% Acetic acid	3% Sodium Hydroxide			
37% Hydrochloric acid	5% Nitric acid	20% Sodium Hydroxide			
15% Sulfuric acid	15% Phosphoric acid	10% Potassium hydroxide			

## **OPERATING GUIDELINES**

#### **Membrane Characteristics:**

SelRO<sup>®</sup> Composite nanofiltration membrane in a spiral wound configuration, with superior pH and temperature stability.

Performance specifications shown on the front side of this document are nominal values.

## **Options:**

Feed channel spacers: 31 mil (X) and 57 mil (Z)

## **Operating Limits:**

- Operating Pressure: Maximum operating pressure for SelRO<sup>®</sup> MPS-34 is 510 psi (35 bar). Actual operating pressure is dependent upon system flux rate, as well as feed, recovery and temperature conditions.
- Permeate Pressure: Maximum allowed permeate pressure is 3 psi (0.2 bar).
- Differential Pressure: Maximum differential pressure limit is 10 psi (0.7 bar) per element. Maximum differential pressure for any length vessel is 50 psi (3.5 bar).
- Operating and Cleaning Temperature: The operating and cleaning temperature is limited to 122°F (50°C) for the 2.5" and 4" elements due to the material of construction of the permeate tune for the small elements.
- pH: Allowable range for continuous operation is 0-14.
  When a stainless steel permeate tube is used, corrosive acids should be avoided.

#### Water Quality for Cleaning and Diafiltration:

- Turbidity: Maximum feed turbidity is 1 NTU.
- **Guidelines:** For more details, please consult with KSS Process Technology Group.

#### **Chlorine and Chemical Exposure:**

- It is not recommended to expose the MPS-34 membrane to chlorine or other oxidants, as it may affect the membrane performance.
- Sodium metabisulfite (without catalysts such as cobalt) is the preferred chemical to eliminate free chlorine or other oxidizers in the feed.

 It is not recommended to expose the MPS-34 membrane to organic solvents, such as alcohol, acetone, etc.

#### Feed Flow Rate:

Maximum and minimum flow rate for the MPS-34 spiral module are as follows:

- 2540 Minimum 2 gpm (7.5 liter/min)
- 2540 Maximum 5 gpm (19 liter/min)
- 4040 Minimum 6 gpm (22 liter/min)
- 4040 Maximum 17 gpm (65 liter/min)

Actual feed flow rate is dependent upon system flux rate, feed characteristics, fouling tendency and system design:

## **Element Handling:**

- Cleaning Materials: Depending on the nature of the feed, cleaning will include low pH cycle, high pH cycle, and surfactant blends. Consult KSS regarding the cleaning of your membranes.
- Lubricants: For element installation, use only water or glycerin to lubricate seals. The use of petroleum or vegetable-based oils or solvents may damage the element and will void any warranty.
- Storage Solution: Should be made with:
  - Short Term (up to two weeks): 0.25 w/w sodium metabisulfite.
  - Long Term: 0.7% w/w benzalkonium chloride.
  - Glycerin should not be used for storage of the MPS-34 membrane.
  - The membrane module should not get dry. It should be stored in a sealed bag, in a temperature ranging from 36°F - 86°F (2°C - 30°C).

## Service and Ongoing Technical Support:

KSS has an experienced staff of professionals available to assist end-users and OEMs for optimization of existing systems and support with the development of new applications. KSS also offers a complete line of membrane pretreatment, cleaning, and maintenance chemicals.

KOVALUS SEPARATION SOLUTIONS™, LLC • 850 Main Street, Wilmington, MA 01887 Main: +1-978-694-7000 • Toll Free: +1-888-677-5624

For complete contact information and listing of our global locations, visit www.kovalus.com

©2023 KOVALUS SEPARATION SOLUTIONS™, LLC. All rights reserved worldwide. For related patent and trademark information, visit www.kovalus.com/legal.

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information