

# TARGA® PM100 Hollow Fiber Cartridges

## 8-inch Industrial Water Ultrafiltration Cartridges

### PRODUCT DESCRIPTION

<b>Membrane Chemistry:</b>	Proprietary semi-permeable polysulfone
<b>Membrane Type:</b>	PM100
<b>Housing Shell/End Caps:</b>	Proprietary polysulfone
<b>Fiber Support Netting:</b>	Polypropylene/Polyethylene
<b>Permeate Collection Tube:</b>	PVC
<b>Potting Material:</b>	Proprietary epoxy compound
<b>Regulatory Status:</b>	UL Listed to ANSI/NSF Standard 61
<b>Storage Solution:</b>	Glycerin

### PRODUCT SPECIFICATIONS


Part Number	Model	Nominal MWCO	Membrane Area ft <sup>2</sup> (m <sup>2</sup> )	Production Range gpm (m <sup>3</sup> /hr)
0720406	TARGA® 8048-238-43-PM100	100,000	238 (22.1)	15.2 (3.4) - 7.1 (1.6)
0720407	TARGA® 8072-367-43-PM100	100,000	367 (34.1)	23.4 (5.3) - 11.0 (2.5)

### OPERATING AND DESIGN INFORMATION\*

<b>Maximum Pressure (water):</b>	45 psi (3.0 bar) @ 104° F (40° C) or less
<b>Temperature Range:</b>	32° F (0° C) - 104° F (40° C)
<b>Maximum Production Transmembrane Pressure:</b>	30 psi (2.1 bar)
<b>Maximum Backflush Transmembrane Pressure:</b>	20 psi (1.4 bar)
<b>Maximum Total Chlorine @ 77° F (25° C) or lower:</b>	200 ppm @ 9.5 pH or higher during intermittent backflush
<b>Maximum Total Chlorine Contact:</b>	200,000 ppm-hrs cumulative

\*Consult KSS Process Engineering Group for specific applications

### NOMINAL DIMENSIONS

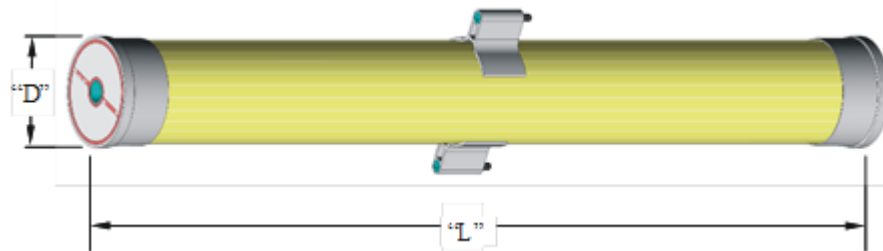

Model	Fiber Diameter (ID)		D		L	
	inches	mm	inches	mm	inches	mm
TARGA® 8048-238-43-PM100	0.043	1.1	8.4	213	48	1219
TARGA® 8072-367-43-PM100	0.043	1.1	8.4	213	72	1829

## STORAGE GUIDELINES

**Cartridge Storage Conditions:**

New cartridges are impregnated with glycerin. Glycerin should be removed from new cartridges before initial use with a rinse followed by a caustic wash and then a caustic/chlorine wash. See pre-startup cleaning instruction sheet packed with each cartridge shipment.

New cartridges should be stored in their original shipping containers and crates until ready for installation, as follows:

- Indoors, out of direct sunlight.
- At temperatures between 50 – 85 °F (10 – 30 °C).
- At relative humidity below 70%.
- In a horizontal position.

Used cartridges should be cleaned, rinsed and impregnated before storage with one of the following solutions.

- Glycerin @ 80 – 100% (best)
- Phosphoric acid @ pH 2 – 3
- Benzoic acid or sodium benzoate @ 1,000 ppm
- Sodium bisulfite or sodium metabisulfite @ 1,000 – 5,000 ppm


Cartridges stored in sodium bisulfite or sodium metabisulfite should be flushed with clean water and impregnated with fresh solution at six-month intervals. Once impregnated the cartridges should be left on the system with all valves closed or removed from the system and sealed in plastic bags. Storage conditions described above for new cartridges should be used for storage of used cartridges. Cartridges must be drained, rinsed and cleaned after storage per the pre-startup cleaning instruction sheet packed with each cartridge shipment.

## CARTRIDGE ASSEMBLY AND COMPONENTS

Item	Description		KSS Part Number
1	8" HF Cartridge	1 each	See first page
2	Leveling Hardware (Screw ½" X 13)	2 each	1002443
3	Leveling Hardware (Nut ½" X 13)	2 each	1002443
4	8" Coupling Set (gasket included)	2 each	0151303
5	O-Ring, Permeate Adapter	8 each	0211022
6	Permeate Adapter	2 each	1002655
7	2 ½" Coupling Set (gasket included)	2 sets	0151304 / 0151261
8	End Cap	2 each	0040213

**Kit Process Pass for 8" Cartridge**

KSS Part Number: 0220158

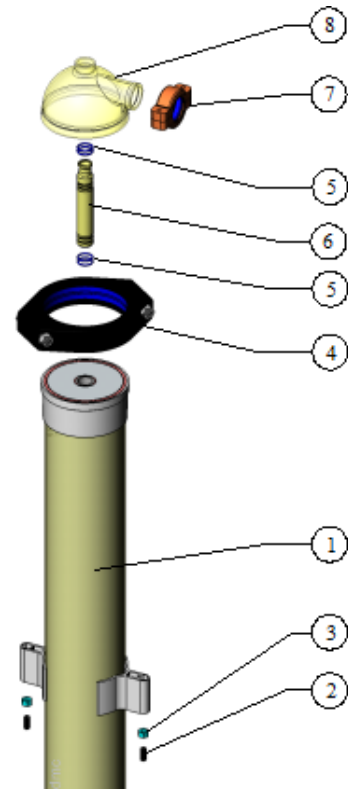

*The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information*

**KOVALUS SEPARATION SOLUTIONS™, LLC.** 850 Main Street, Wilmington, MA 01887  
Main: +1-978-694-7000 • Toll Free: +1-888-677-5624

For complete contact information and listing of our global locations, visit [www.kovalus.com](http://www.kovalus.com)

©2023 KOVALUS SEPARATION SOLUTIONS™, LLC. All rights reserved worldwide. For related patent and trademark information, visit [www.kovalus.com/legal](http://www.kovalus.com/legal).

10/23 Rev 23-1