

# WINEFILTER II 5" Hollow Fiber Cartridges

Hollow Fiber Crossflow Cartridges for Wine Filtration


PRODUCT DESCRIPTION				
Membrane Type:	Microfiltration			
Membrane Material:	Polysulfone			
Regulatory Status:	Compliant with US FDA CFR Title 21, EC Reg. No. 1935/2004, and EU Reg. No. 10/2011.			
Housing Construction:	Polysulfone shell and end caps			
Storage Solution:	Glycerin			

SPECIFICATIONS					
Model	Part Number	Active Membrane Area ft <sup>2</sup> (m <sup>2</sup> )	Fiber Inside Diameter mil (mm)		
WINEFILTER II 5043	0720181	70 (6.5)	43 (1.1)		
WINEFILTER II 5060	0720217	97 (9.0)	43 (1.1)		

OPERATING AND DESIGN INFORMATION*				
Recommended Inlet Pressure:	20-30 psi (1.4-2.1 bar)			
Maximum Transmembrane Pressure:	25 psi (1.7 bar)			
Maximum Feed Side Pressure Drop:	25 psi (1.7 bar)			
Maximum Backflush Pressure:	20 psi (1.4 bar)			
Maximum Operating Temperature:	104°F (40°C) @ pH 6			
Maximum Cleaning Temperature:	122°F (50°C)			
Allowable pH (Cleaning):	1.5 – 13.0 @ 104° F (40°C)			
*Consult KCC Dragge Taskaslary Crown for an affici information				

\*Consult KSS Process Technology Group for specific information.

# NOMINAL DIMENSIONS

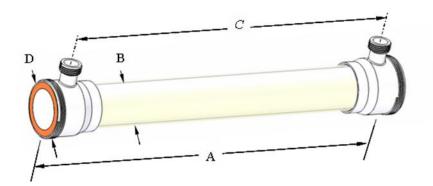

Model	A		В		С		D		Permeate	Process
	inches	mm	inches	mm	inches	mm	inches	mm	Connection	Connection
WINEFILTER II 5043	43	1,092	5.0	127	38 5⁄8	981	6.0	152	1 ½" NPSM	6" NPSM
WINEFILTER II 5060	60	1,524	5.0	127	55 ⅔	1,413	6.0	152	1 ½" NPSM	6" NPSM

## **OPERATING GUIDELINES**

#### **5" HOLLOW FIBER CARTRIDGE HARDWARE**

Item	Description		KPN
1	5" HF Cartridge		
2	Process Cap Nut		0040364
3	Cartridge Gasket Silicon		0211095
4	Cartridge Reducing Elbow		0040365
5	Cartridge Straight adapter (threaded)		0040376
6	Manifold Gasket	EPDM	0090439
		BUNA	0090432
7	Cartridge Backup Ring		0040368
8	Manifold Cap Nut		0040367
9	Permeate Port Gasket		0090448
10	Permeate Plug		0040375
11	Permeate Adapter Sanitary		0211787
12	Permeate Cap Nut (for part 17)		0040377

### Lubricants

For cartridge installation, use only water or glycerin to lubricate seals. The use of petroleum or vegetable-based oils or solvents may damage the cartridge and will void the warranty.

#### **Exposure to Chemical Oxidants:**

Exposure to chemical oxidants for thorough cleaning and sanitization may prove necessary and useful.


- Chemical oxidants commonly used in food applications include peracetic acid blends, hydrogen peroxide, and sodium hypochlorite. Please consult KSS for recommended addition rates, frequency of use, and tolerance.
- Potassium metabisulfite (without catalyst such as cobalt) is the preferred chemical to eliminate residual chlorine or similar oxidizers prior to processing the feed stream.

#### **KSS Capability**

KSS is the leader in crossflow membrane technology, manufacturing reverse osmosis, nanofiltration, microfiltration, and ultrafiltration membranes and membrane systems. The industries served include food, dairy and beverage, pharmaceutical, biotechnology, water and wastewater, semiconductors, automotive, chemical and general manufacturing. KSS adds value by providing top quality membrane products and by sharing its experience in the design and supply of thousands of crossflow membrane systems worldwide.

#### Service and Ongoing Technical Support

KSS has an experienced staff of professionals available to assist end-users and OEMs for optimization of existing systems and support the development of new applications. Along with the availability of supplemental technical bulletins, KSS also offers a complete line of cleaning chemicals.

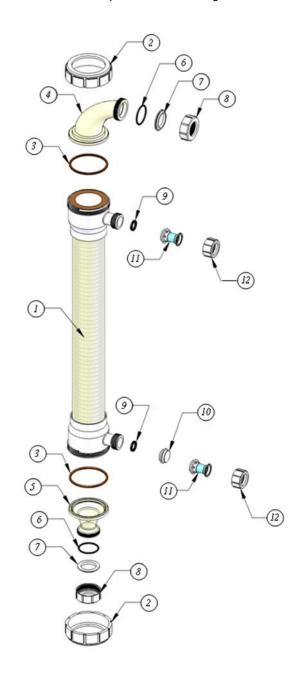

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information

KOVALUS SEPARATION SOLUTIONS™, LLC. 850 Main Street, Wilmington, MA 01887

Main: +1-978-694-7000 • Toll Free: +1-888-677-5624

For complete contact information and listing of our global locations, visit www.kovalus.com

©2023 KOVALUS SEPARATION SOLUTIONS™, LLC. All rights reserved worldwide. For related patent and trademark information, visit www.kovalus.com/legal.